

Reservedel - Sonova

HMS-Artnr	Beskrivelse	Leverandørens artnr
195345	Audiokabel Comfort Audio I100	052-0359
255320	Batteri 3.7V/250mAh Roger MyLink 1.1 (02)/Roger MyLink short loop 1.1 (02)	070-3038
255319	Batteri LiPo TX20 preassembled 1 Roger Passaround	070-3028-000001
255317	Batteri Roger Clip-On Mic 1.1	070-3022
255318	Batteri Roger TouchScreen assembled 1	070-3026-000001
255274	Batteriluke Roger Focus	004-3967-FF1D02
255285	Beskyttelse gummi 02 Roger Multimedia hub/Roger TouchScreen Mic	005-3181-1
255301	Bryter av-på Roger MyLink 1.1 (02)/Roger MyLink short loop 1.1 (02)	046-3010-001
255302	Bryter Slider on/off switch 2P Roger Wall Pilot	046-3016-001
255267	Deksel bak Roger MyLink 1.1 (02)/Roger MyLink short loop 1.1 (02)	004-3239-001
255279	Deksel Roger Multimedia Hub assembled 1	004-4091-P51
255280	Deksel Roger Touchscreen Mic assembled 1	004-4092-P51
233295	Deksel Roger Wall Pilot	052-3242
255314	Deksel sett Roger Clip-On Mic 1.1	055-3007
255270	Deksel Silver gray Roger X	004-3526-P61
255273	Deksel topp Roger MyLink 1.1 (02)/Roger MyLink short loop 1.1 (02)	004-3933-M31
255281	Deksel TX20 Roger preassembled 1	004-4093-P51
255299	Display inspiro V3 Roger Wall Pilot	045-3327-1
255278	Dome TX20 assembled Roger Passaround	004-4052-001
255307	Fargesett Roger 14	052-3265-000XX
255305	Fargesett Roger 17	052-3185-000XX
255304	Fargesett Roger Focus	048-3001-FF
255291	Filter akustisk TX19 Roger TouchScreen Mic	024-4047-061
255316	Fjernkontroll Roger Table Mic II	055-4094-P5
255288	Folie beskyttelse TX 19 Roger TouchScreen Mic	017-3323-1
198599	Halssnor Roger Clip-On mic	052-3234
198600	Halssnor Roger Pen Roger Pen/EasyPen	052-3198
160737	Hodetelefon Digisystem Comfort Duett/Mottaker DH10/Mikrofon DM30	F00349
206719	Kabel Mikro-USB-til-USB 1,3 m Roger Pen/Roger EasyPen/Roger Clip-On/Roger Table Mic/Roger Touchscreen Mic/Roger Multimedia Hub/Roger Pass-around Mic	075-3003
255323	Kabel USB-til-Mini-USB Roger Touchscreen Mikrofon/Roger BaseStation/Roger DigiMaster X	075-3004
255313	Klips Roger Clip-On Mic 1.1	055-0001
255276	Knapp luke Roger Touchscreen Mic	004-4029-001
255283	Knapp m/skjerm Roger Focus	004-8340-Q81
255277	Knapp power Tx19 printed Roger TouchScreen Mic	004-4049-P51
255269	Knapp på/av iSense Classic Roger MyLink 1.1 (02)/Roger MyLink short loop 1.1 (02)	004-3242-061
255275	Knapp stor TX20 printed champagne Roger Passaround	004-4020-P51
255322	Lader dobbel 5V/2A uten kabel Roger Table Mikrofon	075-3002-20
255321	Lader Strømforsyning (7,5 V/650mA US/EU) Roger MyLink/Roger MyLink short loop	075-3001-20
255324	Lader Strømforsyning 5,3V 4A US/EU Roger BaseStation	075-3007-20

206717	Lader USB 5V/1A uten kabel Roger Pen/Roger EasyPen/Roger Clip-On/Roger Table Mic/Roger Touchscreen Mic/Roger BaseStation/Roger Multimedia Hub/Roger Pass-around Mic	075-3000-20
233643	Ladestasjon Roger Clip-On mic	052-3275
233642	Ladestasjon Roger Pen/EasyPen	052-3274
255282	Lysstyring TX20 preassembled Roger Passaround	004-4094-001
255284	O-ring Roger Clip-On Mic 1.1	005-3118-1
255265	Pin Roger Focus 0.4 x 5.60mm	002-3111-1
255260	Pin Roger Focus 0.7x5.2 mm titan	002-0038-1
255261	Pin Roger Focus 0.7x6.0 mm titan	002-0039-1
255266	Pin Roger X titan daim. 0.55 x 8.33mm	002-3119-1
255292	Plugg 3,5 mm jack Stereo 4P Jack 3.5mm TIC TSH-528-H3 Roger TouchScreen Mic	038-3100-1
255272	Skall bunn inspiro V3 Roger Wall Pilot	004-3904-001
255303	Skall Farge Roger Focus beige	048-3001-01
255271	Skall topp inspiro V3 Roger Wall Pilot	004-3682-001
255262	Skruer deksel Roger 14 S0.7x2mm gold-plated	002-0403-1
255263	Skruer deksel Roger 17 S0.8x4.6mm gold-plated	002-0405-1
255264	Skruer MyLink 1.1 (02)/Roger MyLink short loop 1.1 (02) Torx INOX2	002-3057-1
255286	Slynge MyLink loop Roger MyLink 1.1 (02) assembled	014-3032-1
255287	Slynge Roger MyLink short loop 1.1 (02) assembled	014-3074-1
255308	SRM reparasjonssett Roger EasyPen 1.1 REF (Light Sterling) kun for GC	052-3285-000T402
255309	SRM reparasjonssett Roger Pen 1.1	052-3293-000TXXX
255294	SRM Roger 14 (02)/Roger 14	045-3236-1D02
255296	SRM Roger 17 (02)/Roger 17	045-3240-1D02
255310	SRM Roger Clip-On Mic 1.1	052-3294-0000002
255300	SRM Roger Focus	045-3342-1D02
255312	SRM Roger Multimedia Hub 1	052-3299-0000002
255295	SRM Roger MyLink 1.1 (02)/Roger MyLink 1.1 (02)	045-3237-1D02
255298	SRM Roger MyLink 1.1 short loop (02)/Roger MyLink short loop 1.1 (02)	045-3246-1D02
255306	SRM Roger Passaround 1	052-3261-0000002
255297	SRM Roger Wall Pilot	045-3244-1
255293	SRM Roger X (02)/Roger X	045-3203-1D02
255311	SRM Touchscreen Mic 1	052-3297-0000002
255315	Stropp nakke Roger Touchscreen Mikrofon	055-3011
255289	Teip Scotch f/battery Guide-U Roger MyLink 1.1 (02)/Roger MyLink short loop 1.1 (02)	024-3064-001
255290	Teip Scotch punched 15 x 20mm Roger MyLink 1.1 (02)/Roger MyLink short loop 1.1 (02)	024-3619-001
255268	Volumknapp Rocker iSense Classic f/Roger MyLink 1.1 (02)/Roger MyLink short loop 1.1 (02)	004-3241-061