

Reservedeler - Adaptor

HMS-Artnr	Beskrivelse	Leverandørens artnr
256668	Adapter lese-tv Compact+	BP6020701-1
256815	Adapter lese-tv Compact+ HD	BP6020701
256700	Bakdeksel lese-tv Looky 4 HD	BP6020602
256759	Batteri daisyspiller/internett daisyspiller Plextalk Poesi II	BP4021805
256760	Batteri internett daisyspiller Plextalk Linio Pocket	BP4021308
256790	Batteri leselist Seika Mini 16/Seika Mini24/Seika ver 6 pro/Seika ver 5	BP3099803
256763	Batteri lesemaskin ClearReader+ 14,8V, 2,6Ah	BP6005002
256709	Batteri lese-tv Mercury 5	BP6020052
256701	Batteri Li-Ion lese-tv Looky 4 HD 3,7V 2500mA	BP6020603
256783	Batterikort leselist Alva BC640	BP3099906
256780	Batterikort leselist Alva BC680/Alava USB 640	BP3099903
256747	Batteripakke daisyspiller Milestone 212 Ace	BP4001801
256748	Batteripakke internett daisyspiller Milestone 312 Ace	BP4002115
256785	Batteripakke leselist Alva BC640 3,7V	BP3099908
256674	Batteripakke lese-tv Compact 4 HD/Compact 5 HD	BP6020715
256812	Batteripakke lese-tv Traveller HD	BP6010025
256733	Betjeningsboks Mini lese-tv IBIS FHD PRO	BP6010572
256690	Betjeningspanel lese-tv ClearView C 24 HD	BP6010006
256693	Betjeningspanel lese-tv ClearView C One 22	BP6010011
256744	Betjeningspanel lese-tv i-See Acuity	BP6010408
256811	Bezel lese-tv Traveller HD	BP6010025-1
233039	Bord 50x75 Adaptor lese-TV hjul	BP6010582
233038	Bord 52x52 Adaptor lese-TV hjul	BP6010581
256712	Bord XY lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard komplett	BP6010551
256686	Bord XY m/Compact-brett lese-tv ClearView C One 22/ClearView C 24 HD	BP6010002
256787	Bæreveske leselist Alva BC640/Alva USB 640	BP3099910
256781	Bæreveske leselist Alva BC680	BP3099904
256800	Bæreveske leselist Seika Mini 16	BP3099813
256801	Bæreveske leselist Seika Mini 24	BP3099814
256802	Bæreveske leselist Seika ver 5	BP3099815
256803	Bæreveske leselist Seika ver 6 pro	BP3099816
256818	Bæreveske lesemaskin ReadEasy Evolve	BP6005032
256771	Bæreveske lesemaskin ReadEasy Move 2	BP6005023
256676	Bæreveske lese-tv Compact 4 HD	BP6020717
256677	Bæreveske lese-tv Compact 5 HD	BP6020721
244147	Bæreveske lese-tv Compact 7 HD	BP6020735
256669	Bæreveske lese-tv Compact+ HD	BP6020702
256707	Bæreveske lese-tv Looky4 HD	BP6020607
256710	Bæreveske lese-tv Mercury 5	BP6020053
256813	Bæreveske lese-tv Traveller HD	BP6010026
198657	CD stasjon avspiller lydbok Plextalk	BP4021321
256757	CD-drive internett daisyspiller Plextalk Linio Pocket	BP4021810
176464	CD-spiller avspiller lydbok Milestone	BP4002130
256788	Celle leselist leselist Seika Mini 16/Seika Mini24/Seika ver 5/Seika ver 6/Seika 80	BP3099801
256789	Cellekort leselist Seika Mini 16/Seika Mini24/Seika ver 5/Seika ver 6/Seika 80	BP3099802
256691	Compact-brett lese-tv ClearView C One 22/ClearView C 24 HD	BP6010007
256683	Display TFT 7" refleksfritt lese-tv Compact 7 HD	BP6020732
256672	Display TFT LCD 4,3" lese-tv Compact+ HD/Compact 4 HD	BP6020713
256678	Display TFT LCD lese-tv Compact 5 HD	BP6020722
256692	Displayfeste 21,5" og 24" lese-tv ClearView C 24 HD	BP6010010
256819	Dokumentkamera A4 5Mpx HD lesemaskin ReadEasy Evolve	BP6005033
256772	Dokumentkamera A4 5Mpx HD lesemaskin ReadEasy Move 2	BP6005024
256688	Elektronikkboks HD lese-tv ClearView C 24 HD	BP6010004
256687	Elektronikkboks One lese-tv ClearView C One 22	BP6010003
256689	Elektronikkboks Speech lese-tv ClearView C 24 HD	BP6010005
256746	Eliminator daisyspiller/internett daisyspiller Milestone 212 Ace/Milestone 312 Ace	BP4002101
256694	Feste display Speech lese-tv ClearView C 24 HD	BP6010012

Reservedeler - Adaptor

256809	Frontdeksel lese-tv Traveller HD	BP6010023
256717	Gassdemper lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard	BP6010556
256758	Hodetelefon daisyspiller/internett daisyspiller Plectalk Poesi II Philips HL-145	BP42550
256817	Hodetelefon lesemaskin ReadEasy Evolve	BP6005031
256770	Hodetelefon lesemaskin ReadEasy Move 2	BP6005022
256791	Hoved-/powerkort lese-list Seika Mini 16/Seika Mini24	BP3099804
256821	Hovedkort CPU lesemaskin ReadEasy Evolve	BP6005035
256774	Hovedkort CPU lesemaskin ReadEasy Move 2	BP6005026
256753	Hovedkort daisyspiller Plectalk Poesi II	BP4021801
256754	Hovedkort daisyspiller/internett daisyspiller Plectalk Linio Pocket	BP4021701
256796	Hovedkort lese-list Seika 80	BP3099809
256793	Hovedkort lese-list Seika ver 5/Seika ver 6 pro	BP3099806
256765	Hovedkort lesemaskin ClearReader+	BP6005004
256820	Hovedkort lesemaskin ReadEasy Evolve	BP6005034
256773	Hovedkort lesemaskin ReadEasy Move 2	BP6005030
256670	Hovedkort lese-tv Compact 4 HD	BP6020711
256679	Hovedkort lese-tv Compact 5 HD	BP6020723
256738	Hovedkort lese-tv i-See Acuity	BP6010402
256703	Hovedkort lese-tv Looky 4 HD	BP6020605
256806	Hovedkort lese-tv Traveller HD	BP6010020
256684	Hovedkort refleksfritt lese-tv Compact 7 HD 12V/ 2A	BP6020733
256778	Høyrekort lese-list Alva BC680	BP3099901
256749	Høytaler daisyspiller Milestone 212 Ace	BP4001802
256755	Høytaler daisyspiller/internett daisyspiller Plectalk Poesi II/Plectalk Linio	BP4021802
256750	Høytaler internett daisyspiller Milestone 312 Ace	BP4002116
256702	Håndtak/batteriholder lese-tv Looky 4 HD	BP6020604
256764	IO-kort lesemaskin ClearReader+	BP6005003
256734	Kabel HDMI han - HDMI mini han lese-tv IBIS FHD PRO 2 m	BP6010573
256735	Kabel USB 3 type A han - micro B han lese-tv IBIS FHD PRO 1,8m, FULL HD	BP6010574
256706	Kabel USB A->microB lese-tv Looky4 HD	BP6020609
256751	Kabel USB daisyspiller/internett daisyspiller Milestone 212 Ace/Milestone 312 Ace/Plectalk Linio Pocket	BP4002102
256804	Kabel USB mini-B lese-list Seika Mini 16/Seika Mini24/Seika ver 5/Seika ver 6 pro	BP3099817
256726	Kabel Y-ledning lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard 2m	BP6010565
256737	Kamera FHD 1080p lese-tv i-See Acuity	BP6010401
256715	Kamera HD lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard inkl. print og linse	BP6010554
256704	Kamera lese-tv Looky 4 HD	BP6020606
256808	Kamera lese-tv Traveller HD m/kabel	BP6010022
256681	Kamera Sony 8Mpx m/linse lese-tv Compact 5 HD/Compact 7 HD	BP6020725
256727	Kamera Sony FHD lese-tv IBIS FHD PRO 20xZoom m/filter	BP6010566
256807	Kamerakort lese-tv Traveller HD	BP6010021
256767	Kameramodul lesemaskin ClearReader+	BP6005007
256725	Knapp nylon sort lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard	BP6010564
256724	Kontakt 2knapper lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard u/holdfunksjon	BP6010563
256723	Kontakt Av/På m/diode 2knapp lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard	BP6010562
256729	Kontakt Slimline Kipafbryter lese-tv IBIS FHD PRO	BP6010568
256688	Kontrollpanel lesemaskin ClearReader+ u/kort	BP6005006
256766	Kort kontrollpanel lesemaskin ClearReader+	BP6005005
256671	Ladekort lese-tv Compact 4 HD	BP6020712
256680	Ladekort lese-tv Compact 5 HD	BP6020724
256682	Ladekort lese-tv Compact 7 HD	BP6020731
256705	Lader lese-tv Looky 4 HD	BP6020608
256708	Lader lese-tv Mercury 5	BP6020051
256716	Ledning 10pin flat kamera lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard	BP6010555
256730	Ledning 30pin flat lese-tv IBIS FHD PRO 60 cm	BP6010569
233044	Leseplate XY komfort lese-TV ClearView C	BP6010008

Reservedeler - Adaptor

233037	Leseplate XY løst Adaptor lese-TV	BP6010580
256798	Markørhenterkort leselist Seika 80	BP3099811
256792	Markørhenterkort leselist Seika Mini 16/Seika Mini24	BP3099805
256795	Markørhenterkort leselist Seika ver 5/Seika ver 6 pro	BP3099808
256768	Minnekort Flash 4GB lesemaskin ClearReader+	BP6005008
256805	Minnekort micro-SD 8GB leselist Seika Mini 16/Seika Mini24/Seika ver 6 pro	BP3099818
256752	Minnekort SD 8GB daisyspiller/internett daisyspiller Milestone 212 Ace/Milestone 312 Ace/Plectalk Linio Pocket	BP4002103
256695	Monitor 21,5" lese-tv ClearView C One 22	BP6010013
256714	Monitor 22" lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard	BP6010553
256696	Monitor 24" lese-tv ClearView C 24 HD	BP6010014
256711	Monitor 24" lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard	BP6010550
256741	Monitor MultiTouch TFT 22" lese-tv i-See Acuity	BP6010405
256743	Monitor MultiTouch TFT 24" lese-tv i-See Acuity	BP6010407
256740	Monitor SingleTouch TFT 22" lese-tv i-See Acuity	BP6010404
256742	Monitor SingleTouch TFT 24" lese-tv i-See Acuity	BP6010406
256697	Monitor Speech lese-tv ClearView C 24 HD	BP6010015
233043	Monitorarm lese-TV Ibis FHD Pro	BP6010586
170510	Måler fargeindikator avspiller lydbok Milestone Fame 400farger norsk tale	BP4002120
256739	OCR-kort lese-tv i-See Acuity	BP6010403
256736	Panel 2knapper lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard	BP6010575
256718	Panel 4knapper lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard	BP6010557
233042	Plexiglasplate XY bord Adaptor lese-TV	BP6010585
256769	Posisjoneringsmatte lesemaskin ReadEasy Move 2	BP6005021
256816	Posisjoneringsmatte lesemaskin ReadEasy Evolve	BP6005039
256782	Powerkort leselist Alva BC640	BP3099905
256797	Powerkort leselist Seika 80	BP3099810
256794	Powerkort leselist Seika ver 5/Seika ver 6 pro	BP3099807
256722	Print 10K Alps potmeter lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard	BP6010561
256721	Print 3 pos omskifter for JAZZ panel lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard	BP6010560
256731	Print FHD lese-tv IBIS FHD PRO	BP6010570
256719	Print kontroll Interface (internt) lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard	BP6010558
256732	Print LED m/1 diode lese-tv IBIS FHD PRO	BP6010571
256720	Print LED m/1diode lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard	BP6010559
161259	Program avtalebok Agenda avspiller lydbok Milestone 212 oppgradering	BP4002103-1
256786	Punktcelle leselist Alva BC640	BP3099909
256822	RAM-modul lesemaskin ReadEasy Evolve	BP6005036
256775	RAMmodul lesemaskin ReadEasy Move 2	BP6005027
155613	Skinnetui daisyspiller/internett daisyspiller Milestone 212 Ace/Milestone 312 Ace	BP40037
256761	Skinnetui internett daisyspiller Plectalk Linio Pocket	BP4021312
233047	Skjerm 24" lesemaskin ClearReader/ReadEasy	BP6005001-1
233040	Skjerm FHD 22" lese-TV Ibis FHD Pro	BP6010583
233041	Skjerm FHD 24" lese-TV Ibis FHD Pro	BP6010584
256810	Skjerm TFT lese-tv Traveller HD	BP6010024
233046	Skjerm TwinView lese-TV ClearView C	BP6010017
233045	Skjermfeste TwinView lese-TV ClearView C	BP6010011-1
256698	Speech Module lese-tv ClearView C 24 HD	BP6010016
256823	SSH lesemaskin ReadEasy Evolve	BP6005037
256776	SSH lesemaskin ReadEasy Move 2	BP6005028
256685	Stativ lese-tv ClearView C One 22/ClearView C 24 HD	BP6010001
256673	Stativ lese-tv Compact 4 HD	BP6020714
240318	Strømforsyning daisyspiller/internett daisyspiller Plectalk Poesi II/Plectalk Linio	BP4021806
256756	Strømforsyning internett daisyspiller Plectalk Linio Pocket	BP4021310
256784	Strømforsyning leselist Alva BC640 5V-1600mA	BP3099907
256762	Strømforsyning lesemaskin ClearReader+ 20V, 2A	BP6005001

Reservedeler - Adaptor

256824	Strømforsyning lesemaskin ReadEasy Evolve 12V 5A	BP6005038
256777	Strømforsyning lesemaskin ReadEasy Move 2 12V 5A	BP6005029
244146	Strømforsyning lese-tv Compact 7 HD	BP6020734
256675	Strømforsyning lese-tv Compact+ HD//Compact 5 HD 5V/ 2A	BP6020716
256728	Strømforsyning lese-tv IBIS FHD PRO	BP6010567
256745	Strømforsyning lese-tv i-See Acuity	BP6010409
256713	Strømforsyning lese-tv Jazz HD 22 Basic/Jazz HD 24 Basic/Jazz HD 22 Standard/Jazz HD 24 Standard	BP6010552
256814	Strømforsyning lese-tv Traveller HD	BP6010027
256799	Strømforsyning USB leselist Seika Mini 16/Seika Mini24/Seika ver 5/Seika ver 6 pro 5V-1000mA	BP3099812
197615	Tastaturdeksel Cross avspiller lydbok Plectalk	BP4021809
233036	Tastaturdeksel Intuitive avspiller lydbok Plectalk	BP4021808
256699	Toppdeksel/skjerm 4,3" TFT lese-tv Looky 4 HD	BP6020601
256779	Venstrekort leselist Alva BC680	BP3099902