

Tilbehør - Puls

| HMS-Artnr | Beskrivelse | Leverandørens artnr |
|-----------|---|---------------------|
| 244557 | Avlastningsfot 30 cm FlexiElectric/FlexiElectric Corner | 30-67702-9 |
| 244558 | Avlastningsfot 49 cm FlexiElectric/FlexiElectric Corner | 30-67703-9 |
| 244624 | Avstandsbeslag d7 FlexiElectric/FlexiElectric Corner | 30-67672-9 |
| 244551 | Benkeplatebæring d38-42 FlexiElectric/FlexiElectric Corner | 30-67623-9 |
| 244548 | Benkeplatebæring d43-47 FlexiElectric/FlexiElectric Corner | 30-67619-9 |
| 244550 | Benkeplatebæring d48-52 FlexiElectric/FlexiElectric Corner | 30-67622-9 |
| 244552 | Benkeplatebæring d56-60 FlexiElectric/FlexiElectric Corner | 30-67624-9 |
| 244554 | Benkeplatebæring d62-66 FlexiElectric/FlexiElectric Corner | 30-67627-8 |
| 244553 | Benkeplatebæring d66-70 FlexiElectric/FlexiElectric Corner | 30-67625-9 |
| 244549 | Benkeplatebæring d68-72 FlexiElectric/FlexiElectric Corner | 30-67621-9 |
| 244555 | Benkeplatebæring ytterst høyre FlexiElectric/FlexiElectric Corner | 30-67642-1 |
| 244556 | Benkeplatebæring ytterst venstre FlexiElectric/FlexiElectric Corner | 30-67643-1 |
| 244615 | Beslag b100 DiagonalElectric | 30-40946-9 |
| 244616 | Beslag b110 DiagonalElectric | 30-40947-9 |
| 244617 | Beslag b120 DiagonalElectric | 30-40948-9 |
| 244618 | Beslag b130 DiagonalElectric | 30-40949-9 |
| 244619 | Beslag b140 DiagonalElectric | 30-40950-9 |
| 244620 | Beslag b150 DiagonalElectric | 30-40952-9 |
| 244621 | Beslag b160 DiagonalElectric | 30-40953-9 |
| 244622 | Beslag b170 DiagonalElectric | 30-40954-9 |
| 244623 | Beslag b180 DiagonalElectric | 30-40955-9 |
| 244609 | Beslag b40 DiagonalElectric | 30-40940-9 |
| 244610 | Beslag b50 DiagonalElectric | 30-40941-9 |
| 244611 | Beslag b60 DiagonalElectric | 30-40942-9 |
| 244612 | Beslag b70 DiagonalElectric | 30-40943-9 |
| 244613 | Beslag b80 DiagonalElectric | 30-40944-9 |
| 244614 | Beslag b90 DiagonalElectric | 30-40945-9 |
| 244540 | Betjeningsbryter Med stor trykkflate for enklere betjening for brukere med nedsatt finger/håndfunksjon FlexiElectric/FlexiElectric Corner/DiagonalElectric/Verti-InsideElectric | 30-67841-9 |
| 244567 | Deksel b100 FlexiElectric/FlexiElectric Corner | 30-74100-1 |
| 244568 | Deksel b105 FlexiElectric/FlexiElectric Corner | 30-74105-1 |
| 244569 | Deksel b110 FlexiElectric/FlexiElectric Corner | 30-74110-1 |
| 244570 | Deksel b115 FlexiElectric/FlexiElectric Corner | 30-74115-1 |
| 244571 | Deksel b120 FlexiElectric/FlexiElectric Corner | 30-74120-1 |
| 244572 | Deksel b125 FlexiElectric/FlexiElectric Corner | 30-74125-1 |
| 244573 | Deksel b130 FlexiElectric/FlexiElectric Corner | 30-74130-1 |
| 244574 | Deksel b135 FlexiElectric/FlexiElectric Corner | 30-74135-1 |
| 244575 | Deksel b140 FlexiElectric/FlexiElectric Corner | 30-74140-1 |
| 244576 | Deksel b145 FlexiElectric/FlexiElectric Corner | 30-74145-1 |
| 244577 | Deksel b150 FlexiElectric/FlexiElectric Corner | 30-74150-1 |
| 244578 | Deksel b155 FlexiElectric/FlexiElectric Corner | 30-74155-1 |
| 244579 | Deksel b160 FlexiElectric/FlexiElectric Corner | 30-74160-1 |
| 244580 | Deksel b165 FlexiElectric/FlexiElectric Corner | 30-74165-1 |
| 244581 | Deksel b170 FlexiElectric/FlexiElectric Corner | 30-74170-1 |
| 244582 | Deksel b175 FlexiElectric/FlexiElectric Corner | 30-74175-1 |
| 244583 | Deksel b180 FlexiElectric/FlexiElectric Corner | 30-74180-1 |
| 244584 | Deksel b185 FlexiElectric/FlexiElectric Corner | 30-74185-1 |
| 244585 | Deksel b190 FlexiElectric/FlexiElectric Corner | 30-74190-1 |
| 244586 | Deksel b195 FlexiElectric/FlexiElectric Corner | 30-74195-1 |
| 244587 | Deksel b200 FlexiElectric/FlexiElectric Corner | 30-74200-1 |
| 244588 | Deksel b205 FlexiElectric/FlexiElectric Corner | 30-74205-1 |
| 244589 | Deksel b210 FlexiElectric/FlexiElectric Corner | 30-74210-1 |
| 244590 | Deksel b215 FlexiElectric/FlexiElectric Corner | 30-74215-1 |
| 244591 | Deksel b220 FlexiElectric/FlexiElectric Corner | 30-74220-1 |
| 244592 | Deksel b225 FlexiElectric/FlexiElectric Corner | 30-74225-1 |
| 244593 | Deksel b230 FlexiElectric/FlexiElectric Corner | 30-74230-1 |
| 244594 | Deksel b235 FlexiElectric/FlexiElectric Corner | 30-74235-1 |
| 244595 | Deksel b240 FlexiElectric/FlexiElectric Corner | 30-74240-1 |
| 244596 | Deksel b245 FlexiElectric/FlexiElectric Corner | 30-74245-1 |
| 244597 | Deksel b250 FlexiElectric/FlexiElectric Corner | 30-74250-1 |
| 244598 | Deksel b255 FlexiElectric/FlexiElectric Corner | 30-74255-1 |
| 244599 | Deksel b260 FlexiElectric/FlexiElectric Corner | 30-74260-1 |
| 244600 | Deksel b265 FlexiElectric/FlexiElectric Corner | 30-74265-1 |
| 244601 | Deksel b270 FlexiElectric/FlexiElectric Corner | 30-74270-1 |
| 244602 | Deksel b275 FlexiElectric/FlexiElectric Corner | 30-74275-1 |
| 244603 | Deksel b280 FlexiElectric/FlexiElectric Corner | 30-74280-1 |
| 244604 | Deksel b285 FlexiElectric/FlexiElectric Corner | 30-74285-1 |
| 244605 | Deksel b290 FlexiElectric/FlexiElectric Corner | 30-74290-1 |

Tilbehør - Puls

| | | |
|--------|---|------------|
| 244606 | Deksel b295 FlexiElectric/FlexiElectric Corner | 30-74295-1 |
| 244607 | Deksel b300 FlexiElectric/FlexiElectric Corner | 30-74300-1 |
| 244559 | Deksel b60 FlexiElectric/FlexiElectric Corner | 30-74060-1 |
| 244560 | Deksel b65 FlexiElectric/FlexiElectric Corner | 30-74065-1 |
| 244561 | Deksel b70 FlexiElectric/FlexiElectric Corner | 30-74070-1 |
| 244562 | Deksel b75 FlexiElectric/FlexiElectric Corner | 30-74075-1 |
| 244563 | Deksel b80 FlexiElectric/FlexiElectric Corner | 30-74080-1 |
| 244564 | Deksel b85 FlexiElectric/FlexiElectric Corner | 30-74085-1 |
| 244565 | Deksel b90 FlexiElectric/FlexiElectric Corner | 30-74090-1 |
| 244566 | Deksel b95 FlexiElectric/FlexiElectric Corner | 30-74095-1 |
| 244546 | Deksel FlexiElectric/FlexiElectric Corner f/skjule VVS installasjon | 30-67635-9 |
| 244538 | Fjernkontroll IR 1 funksjon FlexiElectric/FlexiElectric Corner/DiagonalElectric/Verti-InsideElectric | 30-67847-9 |
| 244539 | Fjernkontroll IR 2 funksjon FlexiElectric/FlexiElectric Corner/DiagonalElectric/Verti-InsideElectric | 30-67849-9 |
| 244541 | Fjernkontroll Med spiralkabel FlexiElectric/FlexiElectric Corner/DiagonalElectric/Verti-InsideElectric | 40-14701-9 |
| 244547 | Flexibelt avløps kitt FlexiElectric/FlexiElectric Corner | 30-45010-1 |
| 244545 | Programmeringsstyring FlexiElectric/FlexiElectric Corner f/mulighet til å programmere høydeinstilling | 30-66010-9 |
| 244543 | Skjøteledning Sikkerhets spiral FlexiElectric/FlexiElectric Corner/DiagonalElectric/Verti-InsideElectric | 30-67871-9 |
| 244542 | Skjøteledning Sikkerhetsstopp FlexiElectric/FlexiElectric Corner/DiagonalElectric/Verti-InsideElectric | 30-67870-9 |
| 244544 | Skjøteledning Standard betjening FlexiElectric/FlexiElectric Corner/DiagonalElectric/Verti-InsideElectric | 30-40660-9 |
| 244537 | Smartboks FlexiElectric/FlexiElectric Corner/DiagonalElectric/Verti-InsideElectric f/mulighet til å koble sammen flere systemer | 30-69002-1 |